



iRoom's iDock Touchcode

Operating instructions

Instructions for programming PIN and PUK codes

Important information

The iRoom iDock Touchcode is set up with 2 codes. The PIN code is for normal operation and the PUK code is a back-up in case the PIN code is lost or forgotten. Please keep your PUK code in a safe place.

General operation

When the iPad is in the Docking Station it can only be unlocked by entering the 4 to 6-digit code (PIN). The code keyboard is built into the bottom right corner of the iRoom iDock Touchcode. By touching the code keyboard – 6 digits a 'C' and a key symbol appear. The personal access code (PIN) can now be entered. Each press of a key is confirmed by a 'beep'.

The illumination of the code keyboard switches off automatically after 10 seconds. If an entry has been commenced it will be deleted and in such a case must be entered again.

Factory Settings

The factory PIN code setting for all iRoom iDock Touchcodes is 1-2-3-4.

The factory PUK code setting for all iRoom iDock Touchcodes is 4-1-6-6-6.

Opening and closing the iRoom iDock Touchcode securely

1. Please enter your 4 – 6-digit PIN code. (PIN code 1-2-3-4 on delivery).
2. Please confirm your entry with the button. The iDock will now open.
3. To close – activate the opening button situated on the Homebutton at the top right hand corner with a flat hand for 2 seconds. The iDock will now close.

Important: All iDock models close automatically after 10 seconds

Changing your PIN code

1. Please enter your 4 – 6-digit PIN code. (PIN code = 1-2-3-4 on delivery).
2. Press the button for at least 5 seconds. The keyboard will begin to flash.
3. Now enter your new 4 – 6-digit PIN code and confirm it with the key button.
4. The entry of the new PIN code is confirmed by a 'beep'. The new PIN code is now active.



Changing your PUK code

1. Please enter your 4 – 8 digit PUK code (PUK code = 4-1-6-6-6 on delivery).
2. Press the 'Key' and 'C' buttons simultaneously for 5 seconds. The keyboard should begin to flash.
3. Please enter your new 4 – 8 digit PUK code and confirm it with the button.
4. The entry of the new PUK code is confirmed by a 'beep'. The new PUK code is now active.

Returning the PIN code to the factory setting

If you have lost your PIN code it can be returned to the original factory PIN code setting.

1. Please enter your 4 – 8 digit PUK code (PUK code = 4-1-6-6-6 on delivery).
2. Press the 'C' button for 5 seconds. The keyboard will flash momentarily and the return of the PIN code to the factory setting is confirmed by a 'beep'.
3. Your PIN code is now 1-2-3-4 again.

Returning the PUK code to the factory setting

For security reasons it is not possible to return the PUK code to the factory setting. If you should lose your PUK code, please contact your iRoom dealer.

'C' (Clear) button

By pressing button 'C' any entry can be reversed and aborted immediately.

If you have any questions, please contact your iRoom dealer or visit our website: www.iroomsidock.com