

Installation instructions

iRoom's miniDock



iPad mini® Docking Station



Please read these operating instructions and adhere to the content and recommendations they contain before installing, starting up and operating the iRoom miniDock.

List of contents

The miniDock backbox Page 2 Specifications, Informations Page 4

Scope of delivery, Important information Page 3 Warranty Page 5

Mounting Page 3



Installation instructions

miniDock backbox


General information

Room's Minidock can be installed both vertically and horizontally. iRoom's minidock is only compatible with the iPad mini. For an iPad installation, we recommend our iRoom's iDock

During installation of the backbox (flush-mounted housing) the installer must execute an installation without deformation. Swelling mounting mediums should be avoided to minimize the risk of deformation. During installation the protective card has to be placed into the backbox

Description of function

The iRoom miniDock may only be used with the flush-mounted backbox. Operation without the backbox will void the warranty. Missuse of the backbox is prohibited.

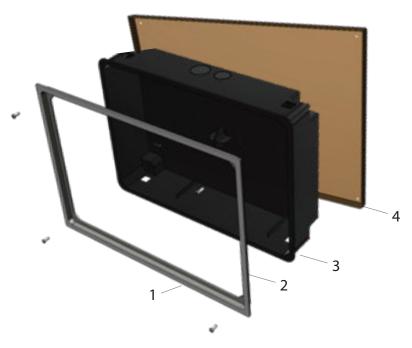

Recess dimensions backbox (W/H/D): 215,0 / 305,0 / 75,0 mm 8.46" / 12.00" / 2.95"

Mounting in Masonry

- 1. Attach the cardboard frame (4) to the backbox (3) and bolt them together with the included mounting screws (1) (3 x 20mm)
- 2. Prepare a recess in the wall (W/H/D: 8.46" / 12.00" / 2.95")
- 3. Remove the break-out for the cable exits on the backbox
- 4. Feed in the power leads through the hole in the back box. Use a suitable cable grip sleeve.
- Place the backbox in the recess. Do not deform the backbox.
- 6. Plaster in the backbox and ensure a straight, flush wall and distortion-free installation of the back box. Otherwise it may cause mechanical problems.
- 7. After finishing plasterwork and wall finishing remove the cardboard frame and attach the aluminum frame (2)!

Mounting in Cavity walls

- 1. Attach the aluminum frame (2) to the backbox (3) and bolt together the frame and the backbox with the included mounting screws (1) (3 x 20mm)
- 2. Prepare a recess in the wall (W/H/D: 8.46" / 12.00" / 2.95")
- 3. Remove the break-out for the cable exits on the backbox
- 4. Feed in the power leads through the hole in the back box . Use a suitable cable grip sleeve.
- Place the backbox in the recess. Do not deform the backbox.
- 6. Cut some small thread gaps in the safety strips that cover the recess spaces for the mounting clips. Do not remove the safety strips! Feed the mounting clips into the recesses and screw them tight. Ensure a straight, flush wall and distortion-free installation of the flush box. Otherwise it may cause mechanical problems.

Scope of delivery

iRoom's miniDock (1x) • glass bezel (1x) • bluetooth receiver - miniD-Audio (1x) • Y-USB-Cable for installation of bluetooth receiver and original lightning cable • adhesive base for cable tie (1x) • cable tie (1x) • operating instructions (1x) • mounting instructions (1x) • 3 x 12 plasfast mounting screw (1x)

Recommended accessories: iRoom miniDock backbox (not included)

Important information

All connection and installation work must be conducted by certified electricians in compliance with the general rules and directives for electrical installations.

The iRoom miniDock has a smooth and shiny surface which is prone to scratches. Handle with care to avoid damage. Do not clean with liquids or fluids. We recommend wearing soft cotton wool gloves during installation.

Select a suitable place to mount the device

- Do not mount or use the iRoom miniDock in wet or moist environments.
- The place chosen to mount the device must provide enough recess depth to allow use of the backbox and the entry of the leads.
- Mount the device in a place that enables reception of a suitably strong Wi-Fi signal so that the iPad™ can also be used when it is
 docked.

Mounting

NB: The backbox is not included in the scope of delivery and must be purchased separately. Fo instructions of installing the back box, please refer to page 2.

- 1. Connect the Apple power adapter to the power supply
- 2. Connect the Y-USB-cable to the Apple power adapter
- 3. Connect the Bluetooth receiver and the original Lightning cable to the Y-USB-Cable
- 4. Fasten the original Lightning cable with the plug cover at the designated place of miniDock.
- 5. Push the iRoom's miniDock into the backbox. Make sure you do not damage the power lead and that the mechanisms are not inhibited by the power lead.
- 6. Fix the miniDock in the Backbox using the plasfast screw 3x12. Close the mounting hole using the dummy cover.
- 7. Unpack the cover plate. Attach the cover plate to the frame of iRoom's miniDock.
- 8. Ensure a proper locking of the magnic mounting system.
- 9. Switch on main power supply
- 10. For information on how to operate the device correctly, please read the operating instructions.



Specifications

Dimensions miniDock (W/H/T):	226,0 / 315,0 / 77,8 mm 8.89" / 12.40" / 3.06"
Dimensions Installation box (W/H/T):	226,0 / 315,0 / 77,8 mm 8.89" / 12.40" / 3.06"
Cut out dimensions installation box (W/H/T):	215,0 / 305,0 / 75,0 mm 8.46" / 12.00" / 2.95"
Power supply:	Original iPad mini™ Power supply (not included)
Output:	
Accessories:	Installation box (required for the assembly)

Important information

Protection against theft

iRoom's miniDock DOES NOT PROVIDE ANY PROTECTION against theft. Unauthorised forceful removal of an iPad mini™ cannot be prevented. iRoom GmbH shall accept no liability whatsoever for the theft of iPads!

Safety instructions

- Protect the device from fluids to avoid damage caused by fire or electric shocks!
- The device must not be subject to maintenance by users! Installation and deinstallation must be conducted by certified electrics technicians!
- Do not put any foreign objects into the device!
- Should any fluids or objects enter or fall into the device, or should the device become damaged, disconnect the device from the power supply immediately!

Warranty

Guarantee

The guarantee period shall run for two (2) years from the date of purchase made by the original end customer, unless the device has been repaired or replaced due to the invocation of guarantee rights. In such a case the guarantee shall remain valid until the expiry of the original guarantee period or six (6) months from the date of repair/replacement – whichever period expires first.

Claims for defects and claim validation

Should your miniDock fail or cease to function as desired, please contact your dealer and provide the original invoice, the serial number and a description of the error.

The dealer will arrange for the device to be inspected by the manufacturer or a technician authorised by the manufacturer. The inspector can then confirm a defect has been identified within the guarantee period, has been caused by defective materials or manufacturing, and is not subject to exclusion from the guarantee.

Exclusion from guarantee coverage

The following damages and sources of damage are excluded from the guarantee:

- · Acts of God;
- · Misuse, including (but not limited to) failure to comply with assembly, mounting or operating instructions;
- · Incorrect operation;
- Connection to an unsuitable power supply;
- Repairs and attempted repairs conducted by unauthorised individuals;
- Use of the device in connection with products from other sources;
- · Devices whose manufacturer serial number has been changed, deleted, removed or made illegible;
- Upgrading of devices above and beyond the specifications, features or functions listed in the operating manual

Limits to liability

The above guarantee portrays the entire scope of liability applicable to iRoom GmbH. Hence, iRoom GmbH shall decline any further claims for liability for loss or damage (except in proven cases of gross negligence) resulting from the purchase, acquisition, ownership, possession, sale or use, of this device.

Under no circumstances shall iRoom GmbH accept any liability for subsequent consequential damages, delays, unsuitable or incorrect information or advice, and violation of copyright. The rights of the purchaser as regards defects shall not be affected.

Various conditions

Absolutely nobody, including all sales and distribution partners, dealers, agents and sales representatives, shall have any right whatsoever to take on responsibility for guarantee rights or to alter them in any way on behalf of iRoom GmbH.

The purchaser shall take sole responsibility for ensuring the device is suitable for the purpose for which it is to be used.

iRoom's miniDock

Installation instructions



iRoom GmbH – intelligente Technik

Bayerhamer Str. 5 A-5020 Salzburg Austria

Visit our website: www.iroomidock.com

